

Nt mini controller hotkeys

Power on/off your Nt mini system	[select] + [a]
Reset game	[select] + [up]
Video switch	[select] + [right]
Enter analog video setup menu	hold [up] on power up
Enter controller test menu	hold [down] on power up
Reset all Nt mini settings to default	hold [start] on power up

Clean your game cartridges

If you are experiencing issues with any cartridges, make sure they are squeaky clean. 99% of all issues are game cartridge related due to dirty cartridge pins.

User guide

For the complete Nt mini user guide please visit support.analogue.co.

Handling and care

Do not insert two cartridges at once...
Only use the AC adapter included with your Nt mini...

...or risk damaging your Analogue Nt.

Support and FAQ

Explore the in-game menu to customize your Nt mini with: scaling, palettes, cropping, scanlines, audio features, controller hotkeys, LED controls, 8/16 sprites & more.

For customer support and FAQ please visit support.analogue.co.

 
 


Congratulations on becoming an analogue Nt mini owner.

The Nt mini is a sophisticated device, unlike anything else ever made. Playing NES and Famicom cartridges is a fraction of what it can do. This is only the beginning.

Start using your Nt mini

Insert the ac adapter into the power input. Plug your HDMI cable into your tv. Power the system on by pressing the red power button, with or without a game cartridge inserted.

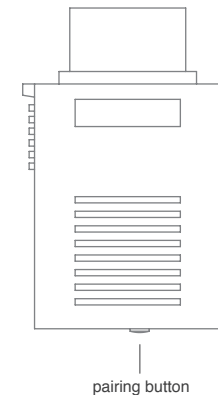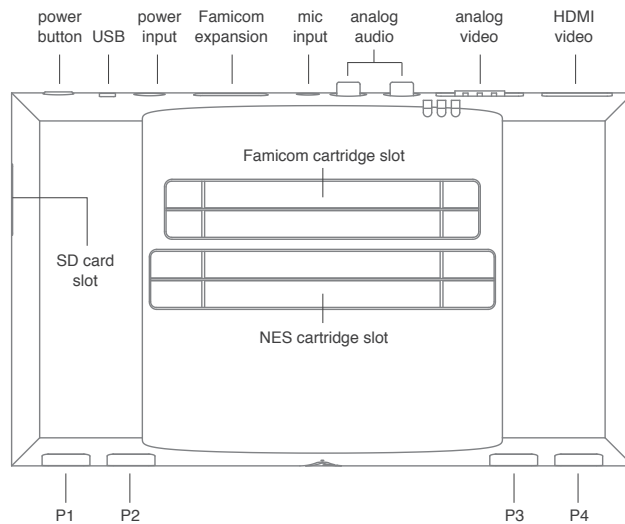

Pairing

1. Hold start for 3 seconds on your NES30 controller to enter pairing mode
2. Press pairing button on Retro Receiver to pair new controller
3. Wait until both LEDs are solid blue
4. Your controller is now paired

The Retro Receiver is compatible with over a dozen controllers, visit support.analogue.co for more details